

P
I
C
A
S
S
O

Libro de instrucciones
Handbook of instructions



CE

MODELOS / MODELS

PICASSO 25 - 29 - 41 - 43 - 51

Distribuido en exclusiva para España y Portugal

AEROGRAFICOS GAHE,SA

Edition n. 2
Rev. 2
Date: December 2007

Mecart s.n.c. di Ballabio Davide & C.
Via E. Bernasconi,47
20035 Lissone (MI)
ITALIA
TEL. 039 462647

Copyright © MECART; 2001
All the rights reserved.

The informations contained in this handbook of instructions, cannot be used for different scopes for which they have been written.

The present publication and the documentation supplied to equipment of the machine, cannot be reproduced neither in part neither complete without the written permission of the Mecart.

The illustrations and eventual schematic designs representing the machine, are understandings only like instructive reference.

The contained of this handbook can be modified from the Mecart without some warning.

The present handbook of instructions has been written in agreement to the norms
UNI 10893: July 2000

Index

SECTION 1 – GENERAL INFORMATIONS.....	6
1.1 GENERAL NORMS OF SECURITY	6
1.2 DATA OF IDENTIFICATION OF THE MACHINE	7
SECTION 2 - TECHNICAL CHARACTERISTICS	8
2.1 GENERALITY	8
2.2 SONOROUS EMISSIONS.....	8
2.3 TECHNICAL CHARACTERISTICS.....	8
2.4 EQUIPMENTS	11
2.5 CONDITIONS OF STORING AND CONSERVATION	12
2.6 MODALITY OF TRANSPORT, MOVEMENT AND RAISING	12
2.7 MOVING	13
2.8 FOUNDATIONS AND LEVELLING.....	13
TO CONFER THE RACING TO APPROPRIATE CENTERS OF SHUNTING	13
2.9 ASSEMBLY	14
2.10 CONNECTION SIPHON OF DRAUGHT VARNISH AND GUN TO SPRAY	14
2.11 DEMOLITION AND DISPOSAL.....	15
SECTION 3 - DESCRIPTION OF THE OPERATION	15
3.1 DESCRIPTION OF THE MACHINE	15
3.2 RANGE OF THE APPLICATIONS	15
3.3 PLACING OF JOB OF THE OPERATOR.....	15
3.4 TRAINING OF THE STAFF	16
3.5 DEVICES OF SAFETY	16
3.6 RESIDUAL RISKS.....	16
SECTION 4 - DEVICES OF COMMAND.....	17
4.1 PREPARATION OF THE MACHINE FOR USE	17
4.2 CONNECTION TO THE POWER LINE.....	17
4.3 STARTER	18
4.3.1 Pump primer.....	18
4.3.2 Spraying.....	19
4.3.3 Regulation exercise pressure.....	19
4.4 ARREST AND EXTINCTION	20
SECTION 5 - MAINTENANCE	21
5.1 GENERAL INFORMATIONS.....	21
5.2 CLEANING	21
5.3 ORDINARY MAINTENANCE.....	22
5.3.1 Reinstatement lubricating oil level.....	22
5.3.2 Releasing aspiration valve.....	22
5.3.3 Cleaning gun filter.....	22
5.3.4 Cleaning and substitution gun nozzle.....	23
5.3.5 Cleaning compression valve.....	23
5.3.6 Substitution lubricating oil.....	24
5.3.7 Cleaning cap impeller of motor cooling.....	24
SECTION 6 – PROBLEMS AND SOLUTIONS.....	25
6.1 INTRODUCTION	25